


ASSEMBLY INSTRUCTIONS




Chessboard

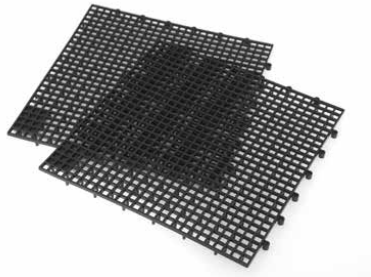



32 pieces




32 pieces

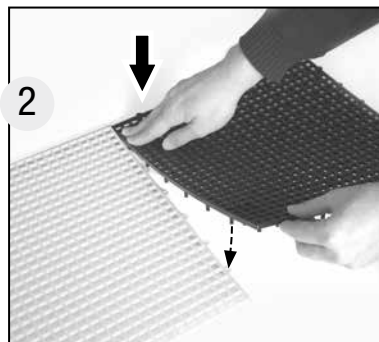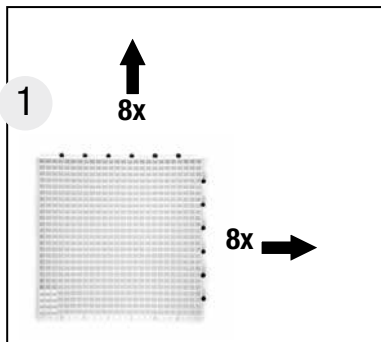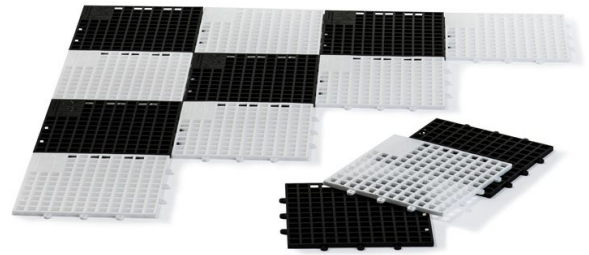


Place the chessboard on an even surface.

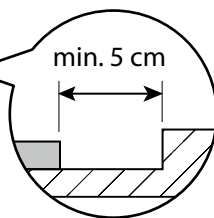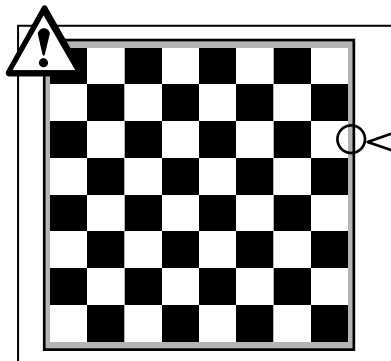

Do not fix the chessboard to the surface.

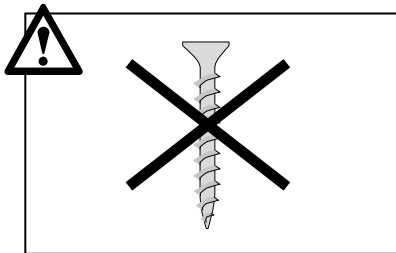

Store the pieces horizontally.

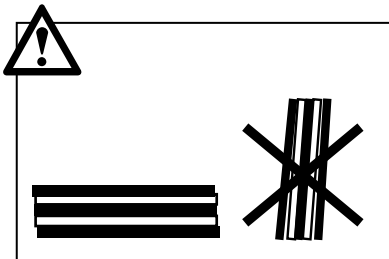

Playground Centre New Zealand
FREEPHONE: 0800 805 256
Tel.: +64 6 348 9054
PO Box 14 Wanganui 4540
customerservice@playgroundcentre.com
www.playgroundcentre.com